



| Pos. | Description | Part-No. | Qty. |
|------|-------------------------|-------------|------|
| 1 | left basic plate | BU01-1GL-* | 1 |
| 2 | right basic plate | BU01-1GR-* | 1 |
| 3 | left adjusting plate | UV02L-* | 1 |
| 4 | right adjusting plate | UV02R-* | 1 |
| 5 | gear lever bearing | UL01L-* | 1 |
| 6 | brake lever bearing | UL01R-* | 1 |
| 7 | gear lever | US02-* | 1 |
| 8 | brake lever | UB02-* | 1 |
| 9 | gear lever toe piece | UTR02 | 1 |
| 10 | brake lever toe piece | UTR01 | 1 |
| 11 | left heel protector | CAR 01L | 1 |
| 12 | right heel protector | CAR01R 6-40 | 1 |
| 13 | footrest | UF01-* | 2 |
| 14 | holder brake cylinder | UHB19-* | 1 |
| 15 | gear shaft | USW02-* | 1 |
| 16 | ball and socket bearing | GAKFL6 | 1 |
| 17 | brake cylinder adapter | UAD 02-35 | 1 |
| 18 | | | |
| 19 | adapter pin | BO 01 | 1 |
| 20 | split pin | Spl 1,6 | 1 |
| 21 | washer | ULS 6,4 | 2 |

-* = colour; G= gold / t= titanium / B= black

| Pos. | Description | Part-No. | Qty. |
|------|-------------------------|------------------|------|
| 22 | basic plate left | BU01GL-* | 1 |
| 23 | basic plate right | BU01GR-* | 1 |
| 24 | collar | DS20-8-6-* | 2 |
| 25 | collar | DS16-6-9 | 1 |
| 26 | reversing lever | USU02-* | 1 |
| 27 | screw | M8x20ISO7380 | 4 |
| 28 | screw | M6x16DIN7991 | 2 |
| 29 | screw | M6x20ISO7380 | 2 |
| 30 | screw | M5x10DIN7991 | 1 |
| 31 | screw | M5x8ISO7380 | 2 |
| 32 | screw | M8x40DIN7991 | 4 |
| 33 | washer | ULS8,4DIN125 | 2 |
| 34 | collar | DS13-8-4,5-St | 1 |
| 35 | nut | 10-UHCDIN934 | 1 |
| 36 | ball and socket bearing | GAKFR6 | 1 |
| 37 | screw | M8x30DIN7991 | 2 |
| 38 | screw | M6x25 ISO7380 | 1 |
| 39 | screw | M6x16ISO7380 | 1 |
| 40 | screw | 10-UHC3-4ISO7380 | 1 |
| 41 | screw | M6x20 ISO7991 | 2 |
| 42 | | | |