

Teileliste H06P

partlist H06P




vers.011 / 02



as31gt.rearsets

gilles.tooling

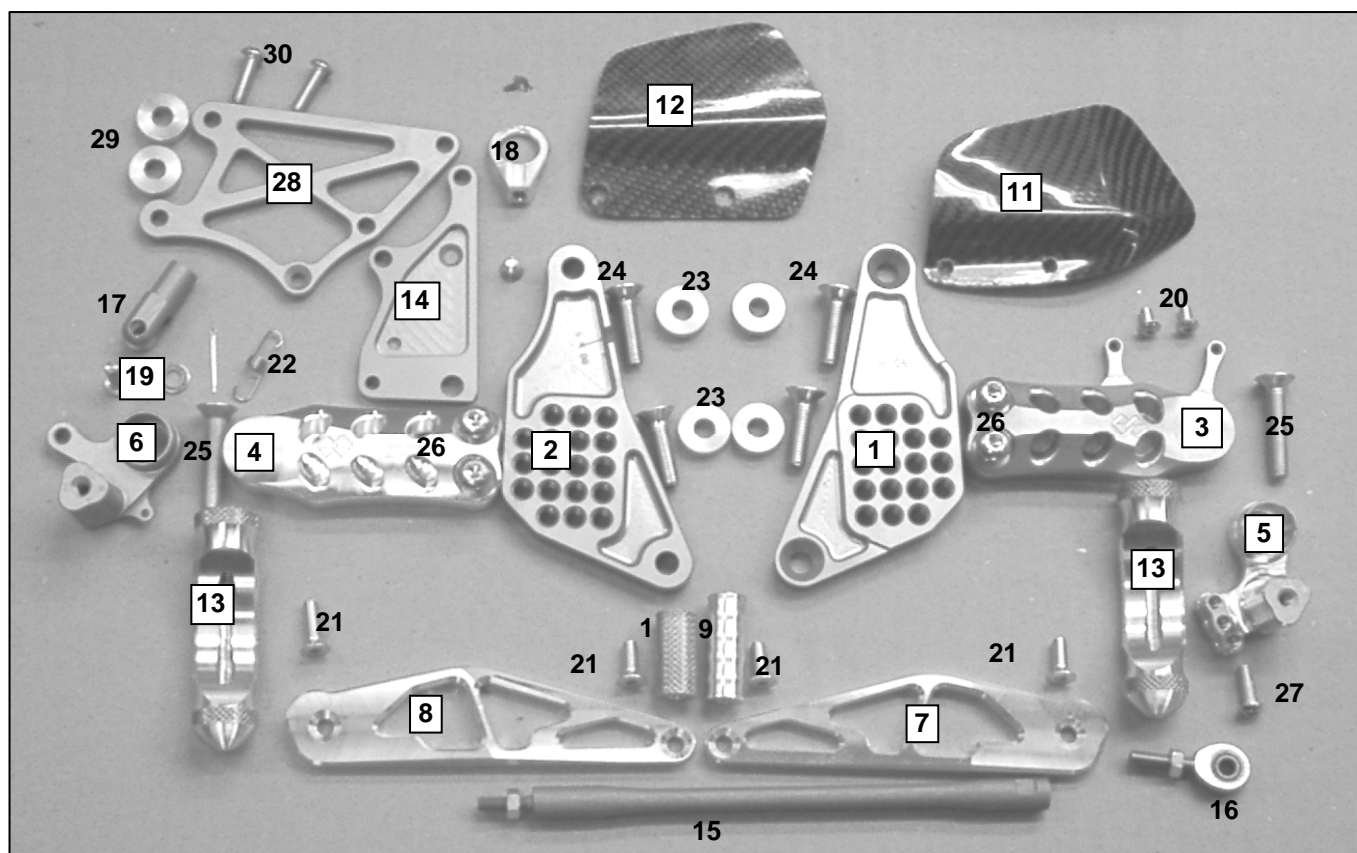

Pos.	Description	Part-No.	Qty.
1	left basic plate	H06-1 GL-*	1
2	right basic plate	H06-1 GR-*	1
3	left adjusting plate	UV 01L-*	1
4	right adjusting plate	UV 01R-*	1
5	gear lever bearing	UL 01 L-*	1
6	brake lever bearing	UL 01 R-*	1
7	gear lever	US 02-*	1
8	brake lever	UB 02-*	1
9	gear lever toe piece	UTR 02	1
10	brake lever toe piece	UTR 01	1
11	left heel protector	CAR 01L	1
12	right heel protector	CAR 01R 6-45	1
13	footrest	UF01	2
14	holder for brake cyl.	UHB 03-*	1
15	gear shaft	USW 04-*	1
16	ball and socket bearing	GAKFR 6	1
17	brake cylinder adapter	UAD 02-20	1
18	holder for stop light	BLS-03	1
19	adapter pin	FKB6x12	1
20	screw	5x8 ISO7380	2

Pos.	Description	Part-No.	Qty.
21	screw	M6x20 DIN7991	4
22	spring	FE30	1
23	aluminum collar	DS 20-8-8	4
24	screw	M8x30 DIN7991	4
25	screw	M8x40 DIN7991	2
26	screw	M8x20 ISO7380	4
27	screw	M6x16 ISO7380	2
28	holder for brake cyl.	UHB 10-*	1
29	aluminum collar	DS 20-8-6	2
30	screw	M6x20 ISO 7380	2
with-	adapter gear shaft	USWAD-01-*	1
out	gear arm	SA01-*	1
picture	ball and socket bearing	GIKFL 6	1

-* = colour; G= gold / t= titanium / B= black