


vcr-S01
teileliste / partlist

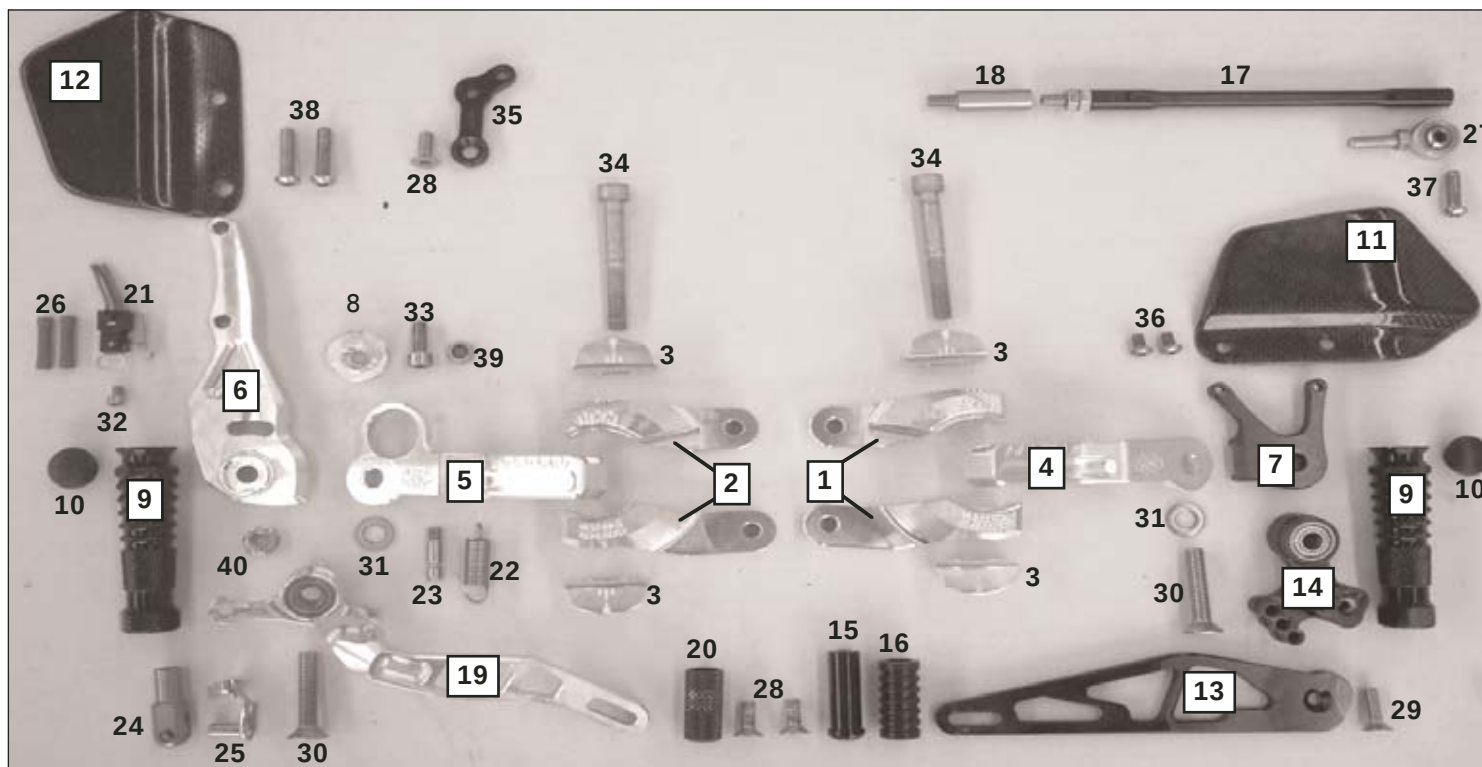

vcr-S01
teileliste / partlist



Pos.	Description	Part-No.	Qty.
1	left rotor plate	VCR-GL-S01-*	1
2	right rotor plate	VCR-GR-S01-*	1
3	rotor	VCR-RT-01-*	4
4	left slider	VCR-SL-01-*	1
5	right slider	VCR-SR-01-*	1
6	holder brake unit	VCR-BU-05-*	1
7	holder shift unit	VCR-SU-01-*	1
8	excenter	VCR-EX-01-*	1
9	footrest	UF-04-*	2
10	plug	7 702 856	2

Pos.	Description	Part-No.	Qty.
11	left heel protector	CAR01-L	1
12	right heel protector	CAR01-R 6-45	1
13	gear lever	US-02-*	1
14	gear lever bearing	UL01L-*	1
15	gear lever toe piece	UTR06IT-*	1
16	gear lever roller	UTR05	1
17	gear shaft	USW03-*	1
18	gear shaft adapter	USWAD01-*	1
19	brake lever	UB-10-*	1
20	brake lever toe piece	UTR01-*	1

Pos.	Description	Part-No.	Qty.
21	stopp light switch	01022.4501-01	1
22	spring brake lever	7 699 626	1
23	spring fixing pin	7 702 868	1
24	brake cylinder adapter	UAD02-30	1
25	adapter pin	FKB6x12	1
26	connector	01-0110058	2
27	ball and socket bearing	GAKFL6	1
28	screw	M6x16-7991-VA	3
29	screw	M6x20-7991-VA	1
30	screw	M8x40-7991-VA	2

Pos.	Description	Part-No.	Qty.
31	washer	ULS8,4	2
32	screw	M4x6-912-VA	1
33	screw	M6x16-912-VA	1
34	screw	M8x60-912-12.9-*	2
35	holder	HA05-B	1
36	screw	M5x8-7380-VA	2
37	screw	M6x20-7380-VA	1
38	screw	M6x25-7380-VA	2
39	nut	M6-985-VA	1
40	nut	M8-439-VA	1