


vcr38gt-Y02

Teileliste/partlist

POS.	Description	Part-No.	Qty.
1	left rotor plate	VCR-GL-Y02-*	1
2	rotor	VCR-RT-01-*	2
3	left slider	VCR-SL-01-*	1
4	holder shift unit	VCR-SU-01-*	1
5	footrest	UF-04_*	1
6	plug	7 702 856	1
7	left heel protector	CAR01L	1
8	gear lever	US-16-*	1
9	gear lever toe piece	UTR06-IT-*	1
10	gear lever roller	UTR05	1
11	gear shaft	USW02-*	1
12	ball and socket bearing	GAKFL6	1
13	screw	M5x8 ISO7380	2
14	screw	M6x16 DIN7991	1
15	screw	M6x20 ISO7380	1
16	screw	M8x25 DIN7991	1
17	screw	M8x20 DIN7991	1
18	screw	M8x25 DIN912	1
19	screw	M8x60 DIN912	1
20	screw	M8x40 DIN7991	1
21	nut	M6 L-DIN 934	1
22	washer	ULS8,4	1
23	collar	DS 20-8-4	1
24	collar	DS 20-8-10	1
25	blind	BL01-*	1

-*color, G= Gold/ B=Black

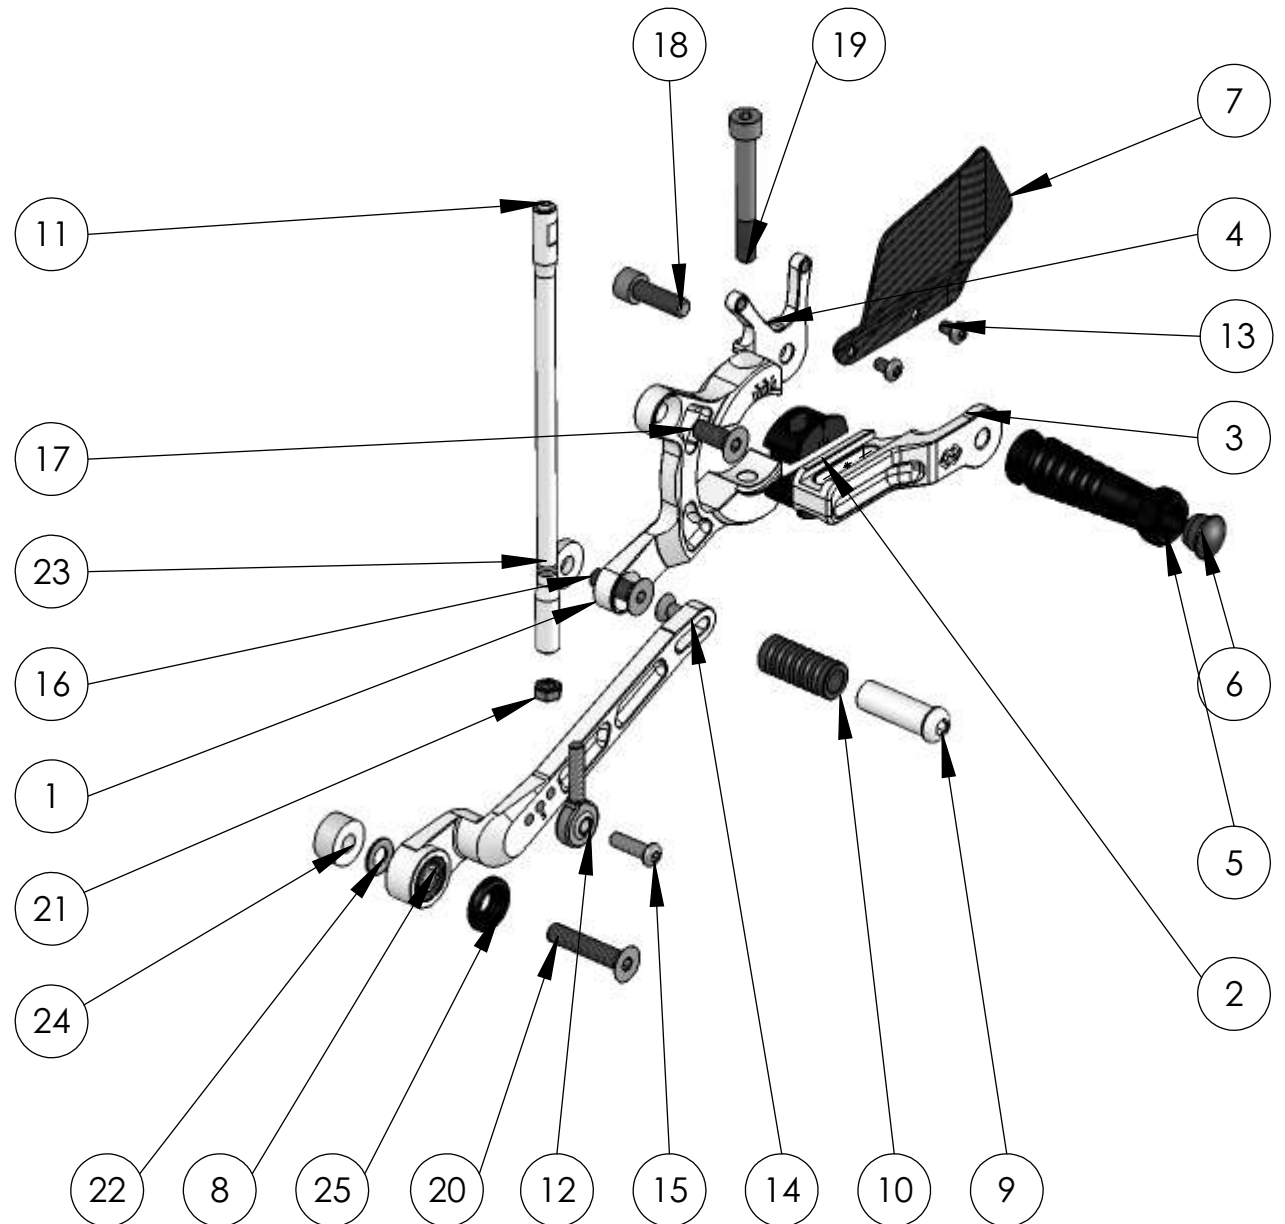

POS.	Description	Part-No.	Qty.
1	right rotor plate	VCR-GR-Y02-*	1
2	rotor	VCR-RT-01-*	2
3	right slider	VCR-SR-01-*	1
4	holder brake unit	VCR-BU-01-*	1
5	excenter	VCR-EX-01-*	1
6	footrest	UF-04-*	1
7	plug	7 702 856	1
8	right heel protector	CAR01_R	1
9	brake lever	UB10-*	1
10	brake lever toe piece	UTR01-*	1
11	stop light switch	01022.4501-01	1
12	spring brake lever	7 699 626	1
14	spring fixing pin	7 702 868	1
13	brake cylinder adapter	UAD02-23	1
15	adapter pin	FKB6x12	1
16	connector	01-0110058	2
17	screw	M6x20 ISO7380	2
18	nut	Mutter M8 DIN439	1
19	screw	M6x16 DIN7991	1
20	screw	M8x20 DIN7991	2
21	screw	M8x40 DIN7991	1
22	washer	ULS8,4	1
23	screw	M6x16 DIN912	1
24	screw	M4x6 DIN912	1
25	screw	M8x60 DIN912	1
26	nut	M6 DIN985	1
27	collar	DS-16-8.5-6.5-10	2

-*color; G=Gold/ B=Black

