


MANUAL FOR

MIRROR BODY SET

MD-9912-C86

1. Tools needed for proces.

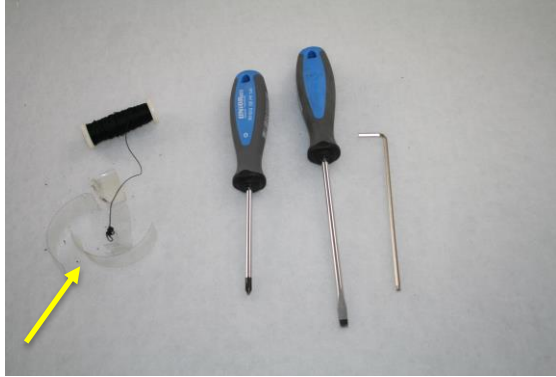

2. Use extra strong thread.



3. Go from side to side to saw of the glue



4. Unscrew the screw



5. Remove all parts.



6. Use plastic spacers (from plastic bottle) to easier lift sideturn indicator.



7. It is best to start in this section. Gently help with screwdriver.



8. Give connectors apart. Be careful they are glued and can be cracked easily



9. Insert cable, mind the direction and connect indicators



10. Start on this side.



11. And then press down so that indicator is in position.



12. Use original parts.



13. Fasten the screw, so that it won't impede the mirror. Also check movement options of mirror holder.



14. Put some silico glue if needed.



15. Reattach the mirror so that it won't hit walls.

