



GILLES TOOLING

Anbauanleitung / installation manual

ABK-RC 46-A-AL

Montage Ausleger Kit
mounting extension-kit

Honda VFR 800

1. Zuerst die Lenkergewichte, dann den originalen Lenker und die Armaturen abschrauben.
2. Den VarioBar wie in Anleitung „Basis Kit“ beschrieben montieren.
3. Die Verdrehsicherung (Bild 3 / A) der Brems-Kupplungsschläuche (Bild 4 / B) sauber abtrennen .
4. Gaszüge zwischen Gabelholm und Rahmen verlegen.(Bild 1/C).
5. Nun die Lenkerarmaturen auf den VarioBar schieben, ausrichten und die Fixierlöcher bohren.
6. Kupplungs- und Bremsschlauch ausrichten festschrauben und **entlüften**.

1. *First dismantle the handlebar-weights, then the original handlebar and the instruments.*
2. *Install the VarioBar as in manual "basis kit" described.*
3. *Remove cleanly the rotary lock (pic.3/A) of the brake hose and coupling hose (pic. 4/B).*
4. *Lay the gas wire between fork tie and frame (Pic1/C)*
5. *Now push the handlebar-instruments over the VarioBar, line it up and bore the fixation holes.*
6. *Line up the coupling and brake hose, screw tight and **bleed it**.*

Abschließend kontrollieren ob alle Züge und Leitungen freigängig sind und nirgends scheuern.

Finally be cautious that all wires and cables have enough room to other components

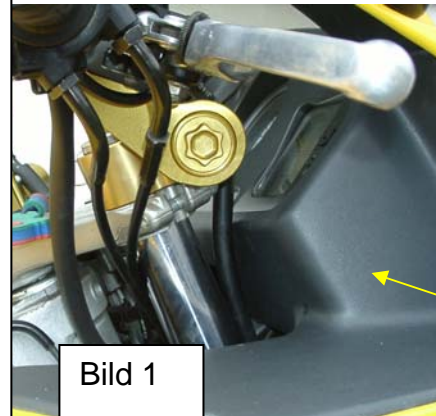


Bild 1

C



Bild 2

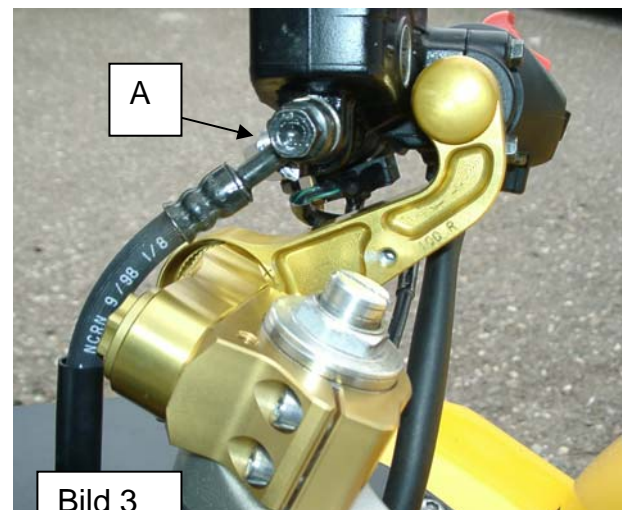


Bild 3

A

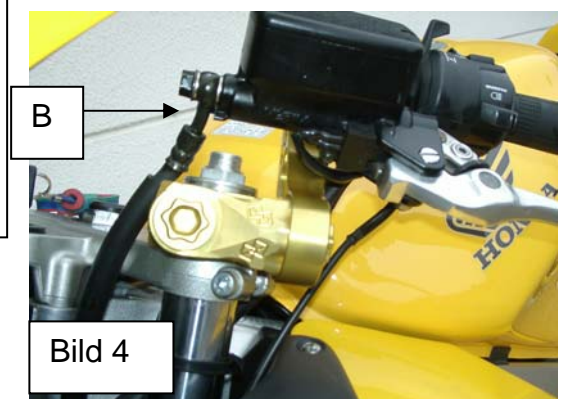


Bild 4

B